



WinCrest EVO Installation Guide

WinCrest films serve as a protective layer on windshields.


While it significantly reduce the chances of breakage, it does not guarantee full protection against strong impacts.

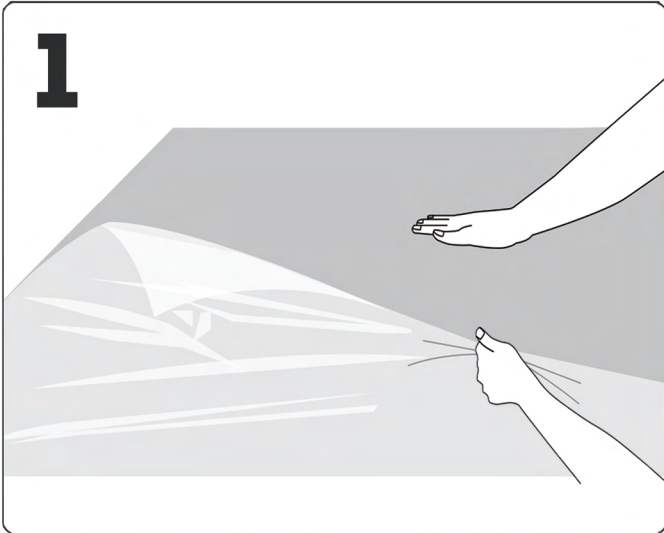


1
Cut the film to the appropriate size for the windshield and remove the cap sheet.

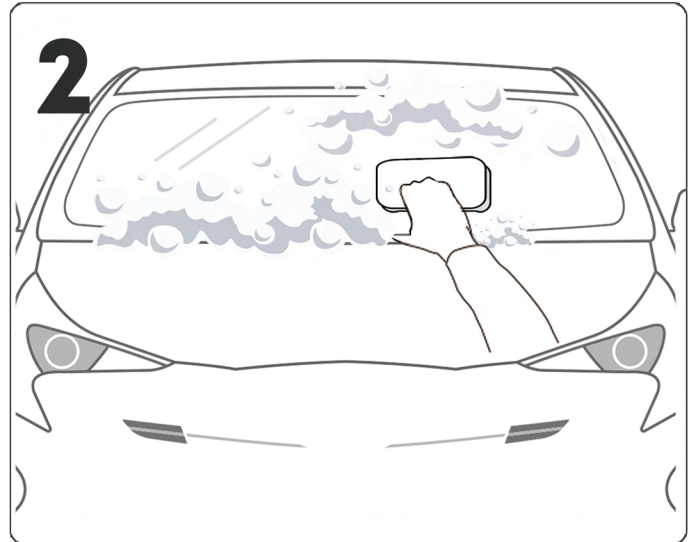

2
Clean the windshield and spray it with slip solution.

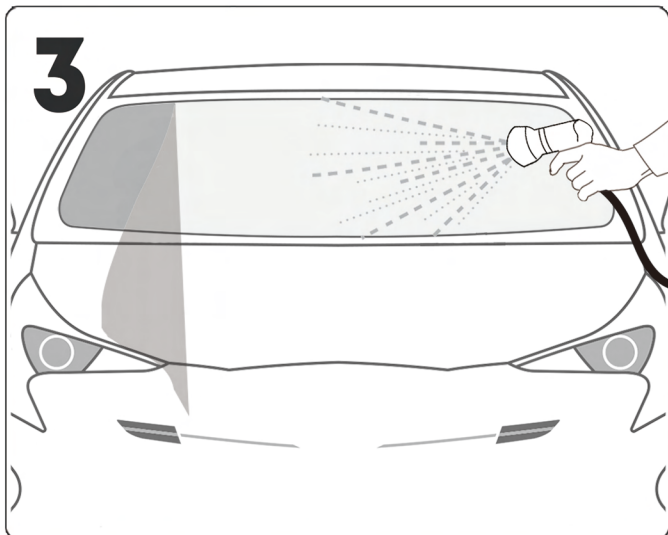


3
Spray the film with room temperature water while removing the release liner.

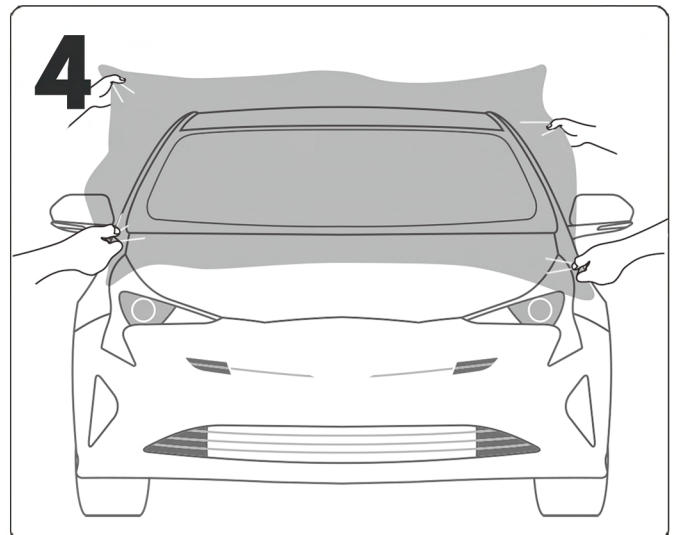


4
Lay the film on the windshield and cut off any excess film.


Turn over →

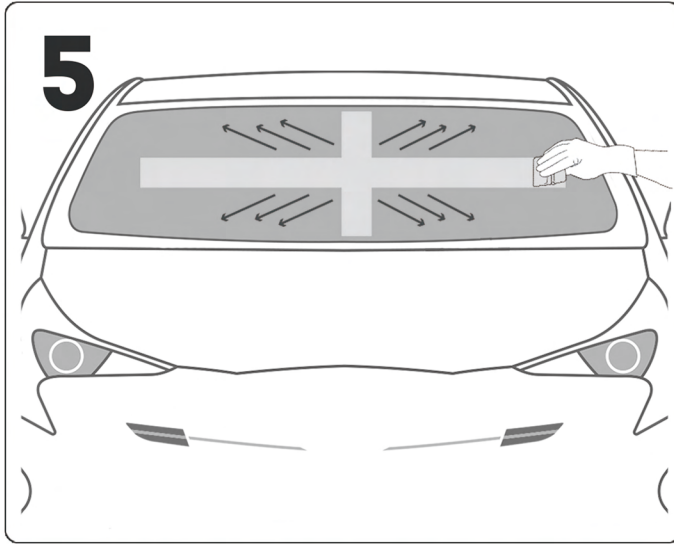


Adjust the film to fit the glass with hands, then start the installation process using a squeegee.

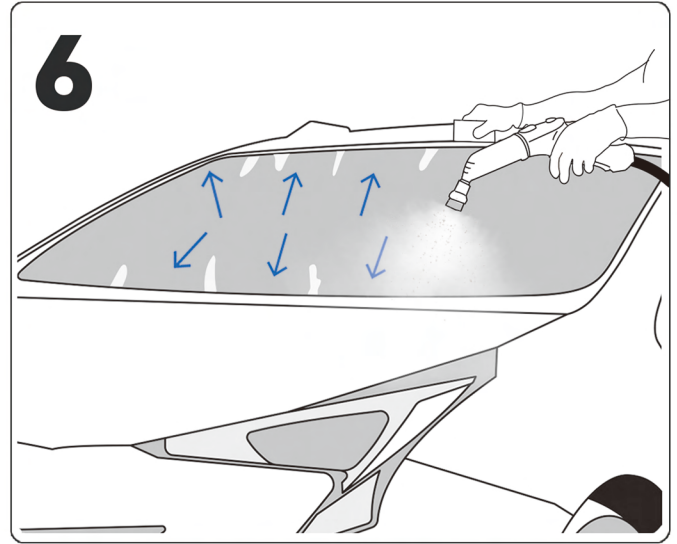

Use a steam gun or hot water under 80°C (170°F) to remove any remaining fingers.

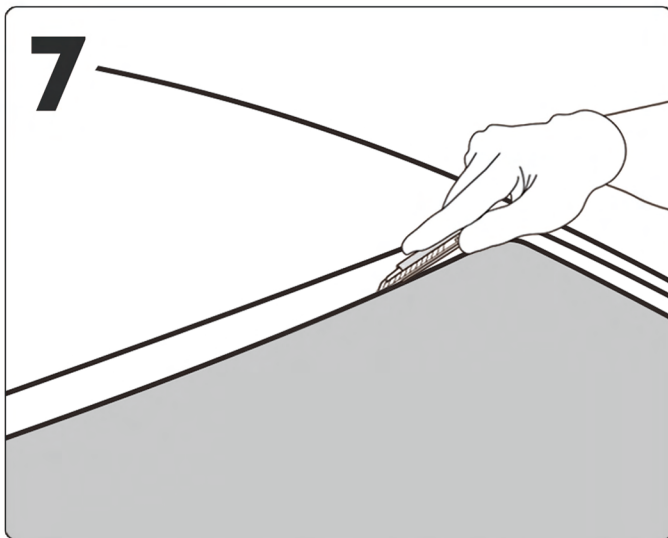

Trim the excess film from the edges, leaving a 1-2mm gap around the glass.

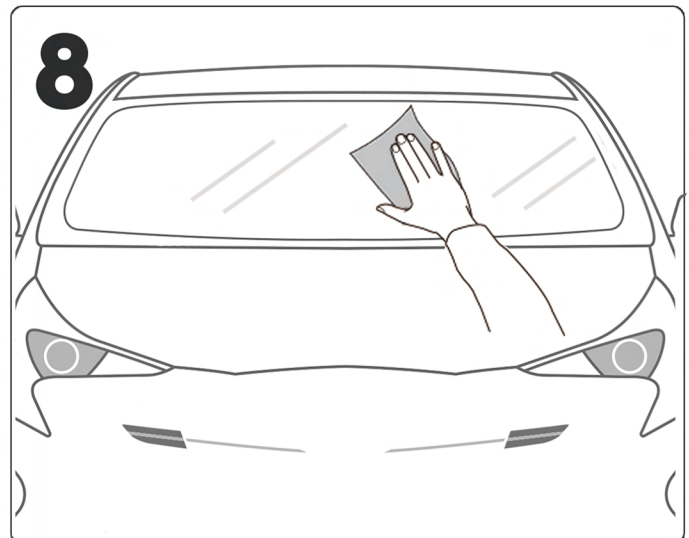

Clean the windshield and make sure that the edges are fixed.

The film may take up to 72 hours to fully cure and bond to the glass.

Therefore, it's important to avoid extreme weather conditions and limit excessive driving during the first 3 days.

Note: Please ensure that the customer receives consultations on aftercare and WinCrest protection film care instructions.