ULTRAFIT™

Product Care Guide

Window Film

Your vehicle has been fitted with ULTRAFIT automotive Window Film.
Following the care instructions below will help keep the window film looking and performing at its best for longer.

Allow enough time for the film to fully dry and settle securely.

Drying time can vary depending on temperature, humidity, and weather conditions.

3-5
DAYS

1 3 DAYS After Installation

Keep windows up

Do not roll down the windows for at least 3–5 days after installation.

Do not press or rub

Do not press or rub the film directly to remove remaining moisture or bubbles.

Allow time to settle

Allow enough time for the film to fully dry and settle securely.

NOTE **Small water droplets, bubbles, or slight haziness** may appear right after installation. This is a normal part of the drying process and will generally disappear naturally as moisture beneath the film evaporates.

2 General Washing

RECOMMENDED

- ✓ Clean the interior glass **only after the film has fully dried.**
- ✓ Use a **clean, soft microfiber towel.**
- ✓ Use a glass cleaner that is **safe for automotive window film/tint.**

AVOID

- ✕ Wiping with heavy pressure
- ✕ Rubbing excessively

3 Choosing the Right Cleaner

Use a mild cleaner

Always confirm that a product is safe for window film / tint before using it.

Use a mild glass cleaner and avoid harsh chemical products.

AVOID

- ✕ Cleaners **containing strong** ammonia
- ✕ Cleaners that contain **abrasives**
- ✕ Strong **solvents** or chemical cleaners
- ✕ Heavy-duty stain removers not designed for window film

4 Precautions

Keep the following away from direct contact with the film surface.

- Knives or metal tools
- Coarse brushes or abrasive pads
- Sharp accessories
- Hard or rough cleaning tools

Scratches or physical damage to the film can be permanent.

5 Caution When Using Seatbelts

Release the belt gently

✓ Guide the buckle by hand and let the belt retract slowly so it doesn't strike the glass.

Buckle impact scratches

✕ Repeated, forceful contact between the metal buckle and the window can scratch or damage the film.

6 Normal Drying Effects

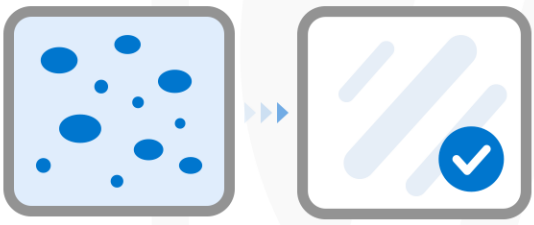

NORMAL
Small water droplets, slight haziness, or fine moisture bubbles may appear right after installation.

IMPROVING
This is a normal part of the drying process and will gradually improve as moisture between the film and glass evaporates.

7 If a Problem Occurs

✕ Do not **pull, cut, trim, remove**, or **attempt to reinstall** the film yourself.

NOTE If **any abnormal conditions persist** after the film has had sufficient time to dry, or if you notice **lifting along the film edges, discoloration, bubbles, or any other damage**, please contact an **ULTRAFIT Authorized Dealer immediately** for inspection.