


INSTALLATION GUIDE

Surface Protection Film

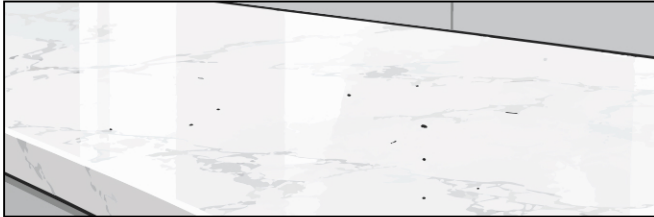

1 Preparation

- ❶ Work in a clean, dust-free indoor environment.
- ❷ Make sure the installation surface is free of mold.
- ❸ Prepare the necessary tools, such as a squeegee, cutter, microfiber towel, and heat gun.

! **CHECK** the condition of the film and installation surface before starting.



2 Surface Cleaning


- ❶ Completely remove dust, oils, and other debris from the surface.
- ❷ Clean thoroughly using a neutral cleaner and a microfiber towel.
- ❸ Confirm the surface is free of contaminants or residue before installation.



3 Film Positioning

- ❶ Cut the film with extra margin beyond the installation area.
- ❷ Check the film's position, edges, corners, and curves before installation.

! **CONFIRM** the final position before removing the liner.

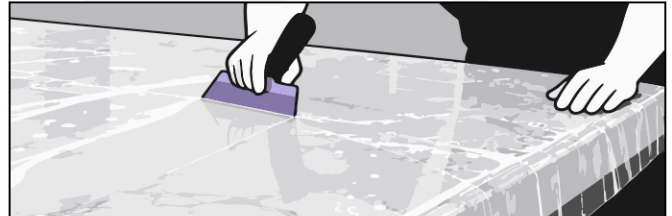

4 Film Application

- ❶ Apply the film while slowly removing the liner.
- ❷ Squeegee with steady pressure from the center outward.

! **TAKE CARE** to avoid wrinkles, bubbles, and overstretching the film.



5 Edge & Corner Finishing

- ❶ If needed, apply appropriate heat to shape curves and corners.
- ❷ Take care not to apply excessive heat or tension.
- ❸ Press the edges firmly, then neatly trim away the excess film.